


OEM 臭氧浓度测试控制模块 SC801-03 使用说明

电气连接:

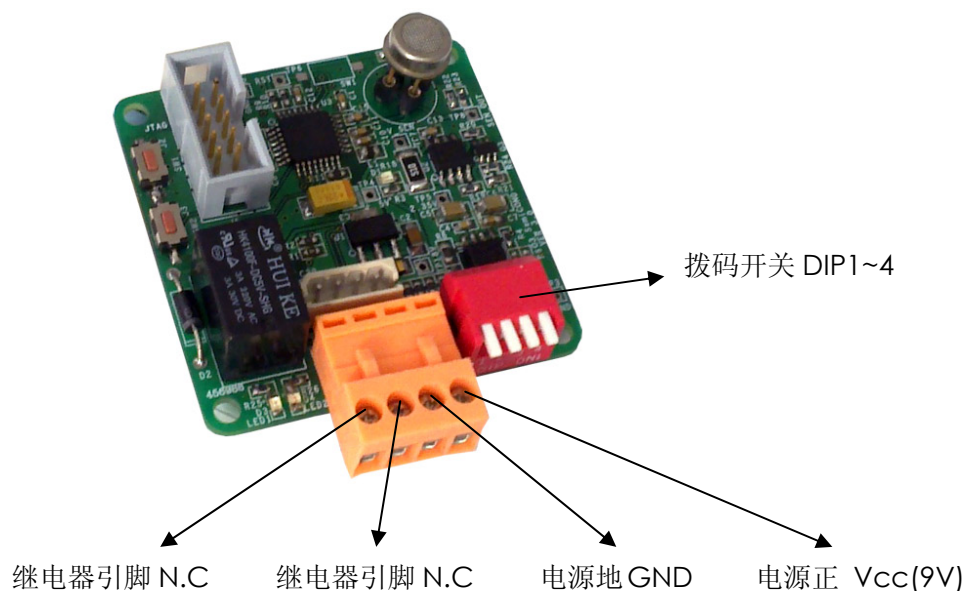

报警点设置拨码开关表:

	DIP1	DIP2	DIP3	DIP4	二进制数	十进制数	对应报警点
//	On	On	On	On	0000	0	0.06ppm
//	On	On	On	Off	0001	1	0.07ppm
//	On	On	Off	On	0010	2	0.08ppm
//	On	On	Off	Off	0011	3	0.09ppm
//	On	Off	On	On	0100	4	0.10ppm
//	On	Off	On	Off	0101	5	0.11ppm
//	On	Off	Off	On	0110	6	0.12ppm
//	On	Off	Off	Off	0111	7	0.13ppm
//	Off	On	On	On	1000	8	0.14ppm
//	Off	On	On	Off	1001	9	0.15ppm
//	Off	On	Off	On	1010	10	0.16ppm
//	Off	On	Off	Off	1011	11	0.17ppm
//	Off	Off	On	On	1100	12	0.18ppm
//	Off	Off	On	Off	1101	13	0.19ppm
//	Off	Off	Off	On	1110	14	0.20ppm
//	Off	Off	Off	Off	1111	15	0.21ppm