## Set up table

Туре	Housing	Mounting version	Wire connection / max. operation temperature	Wire length [cm]	Plug connection
A0		none printed board	none/ (350°C)	none	none
В0		none printed board	none / (350°C) <sup>1)</sup> A / (200°C)	none <sup>(1)</sup> 100	A none
B1		mounting flange	Symbol picture- wire connection	300	C
D0		Screw mountable housing	A / (200°C)	100 300	Symbol picture C Rast 2.5
D1		Screw mountable housing		500	
E1		TO8 with hose connection	none (on request) / (250°C)	none	none

(1) Sensor without wire connection has no cable and thus no length and no plug connection!

## **Order examples**

1.	SO-B0-xxx <sup>2)</sup>	Sensor with TO8 standard housing; without wire connection; working temperature sensor until 350 $^{\circ}\mathrm{C}$
2.	SO-B1-xxx <sup>2)</sup> -A100C	Sensor with TO8 housing + mounting flange + 100 cm wire connection with RAST 2.5 connector; working temperature until $200^{\circ}$ C
3.	SO-D0-xxx <sup>2)</sup> -A100C	Screw mounting housing + 100 cm wire connection with RAST 2.5 connector; working temperature until 200 $^{\circ}\text{C}$

(2) xxx sensor measuring range ( e.g. SO-B0-250 means measuring range: 0.01 - 25.0% O2 )