

Thermal Management

New JRC's stepper motor ICs are power ICs encapsulated in Dual in Line (DIP), EMP and PLCC (Plastic Leaded Chip Carrier) packages. The silicon die is directly bonded to a heat-spreading lead-frame for efficient heat-transfer to an external heat sink, or to a copper ground plane on the printed circuit board.

Theory of power dissipation

To explain thermal management and power dissipation ohm's law could be used, see figure 1.

The power dissipation P_D could be compared to the current in ohm's law. The power dissipation is generating heat, which is flowing from the chip out of the package. In its way out it's "held back" by the thermal resistance. The thermal resistance is depending on what kind of "connection" there is from the chip to the air surrounding the circuit.

There are two "connections" out from the chip to the surrounding air, one metallic and one plastic. The metallic "connection" is the lead frame in the package; the pins on the circuit, the soldering to the copper area on the PCB and the copper area it self to the air see figure 2. There is also a connection from the chip through the plastic package out in the air.

Considering ohm's law in figure 1 with a constant voltage at V_2 it could easily be seen that if the current, I , is increased with a constant resistance, R , the voltage V_1 will be increased compared to the constant voltage V_2 . This could now be compared to the thermal management. If there is a constant ambient temperature, T_A , and the power dissipation is increased with a constant thermal resistance, $R_{th_{J-A}}$, the temperature on the chip, T_J will be increased.

If there are defined maximum ambient temperature, maximum chip temperature and a known maximum power loss the needed thermal resistance could be calculated.

Determine the amount of PCB area.

In figure 3 the thermal resistance could be found for PLCC, DIP and EMP packages depending on how big the copper area is connected to the batwing pins. The graph shows the thermal resistance when the PCB cooling is made on the same side as the circuit. If there is no space on the circuit side vias could be used for PLCC and EMP's to lead the heat through the card to copper areas on the other side of the PCB.

Determining the needed amount of PCB copper area for heat sinking is a simple procedure, following a few basic guidelines.

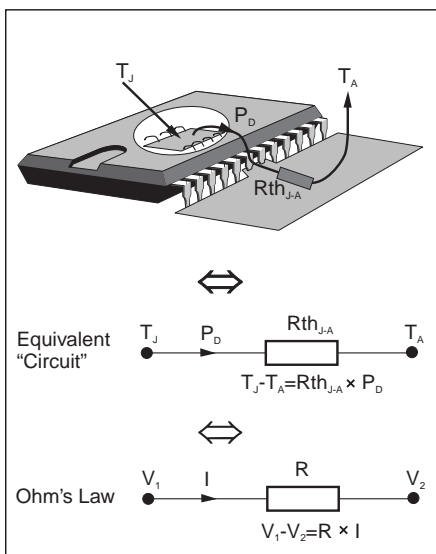


Figure 1. Comparing thermal resistance with ohm's law.

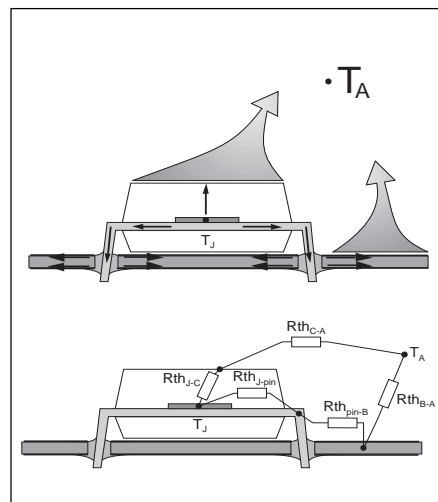


Figure 2. Complete transport ways for heat out of the circuit.

1. Establish a value of the circuit's power dissipation, P_D . Graphs showing typical power dissipation vs. output current are found in our data sheets.
2. Specify maximum operating ambient temperature, T_A .
3. Specify maximum junction temperature, T_J , the temperature of the chip at maximum operating current. No strict rules exist— typically one should design for a maximum continuous junction temperature of 100 °C to 130 °C. Maximum rating is 150 °C.

The maximum value of thermal resistance junction-to-ambient, $R_{th_{J-A}}$, can now be calculated as follows:
 $R_{th_{J-A}} = (T_J - T_A) / P_D$

The graph in figure 3 shows thermal resistance junction-to-ambient vs. the area of a copper ground plane of a PC board. Use this graph to determine the area required to achieve the value of the thermal resistance as calculated. Figure 4 summarizes the output current capability of New JRC's stepper motor drivers for various levels of heat sinking.

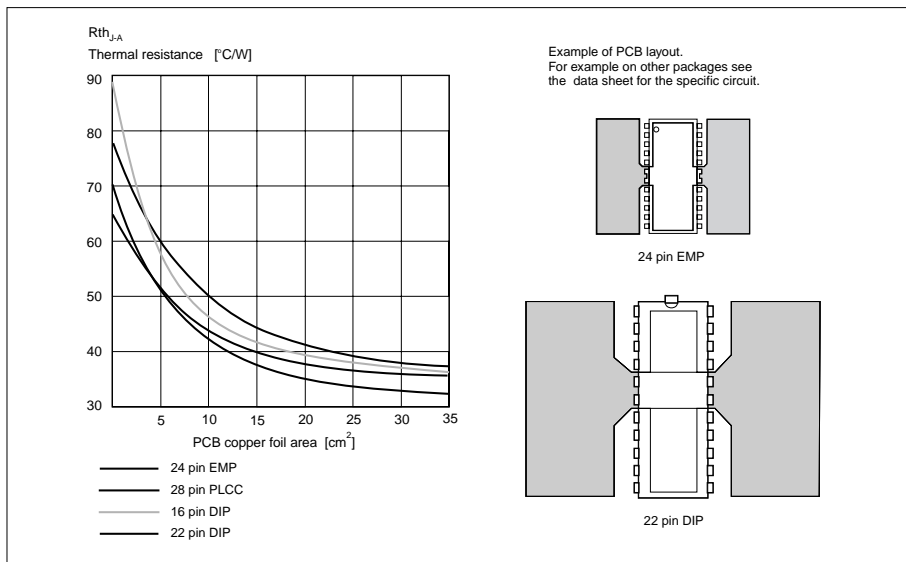


Figure 3. Typical thermal resistance vs. PC Board copper area and suggested layout.

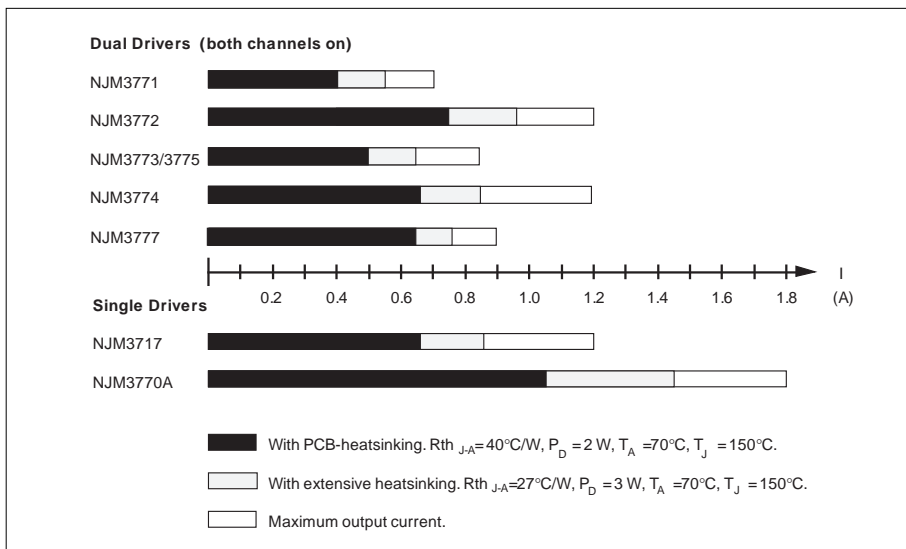


Figure 4. Output current capability for New JRC's stepper motor driver ICs.

Verifying

In order to verify the thermal design, it is useful to make an estimate of the real chip temperature. Attaching a thermocouple or some other miniature temperature sensor right onto the bat-wing ground pins of the IC under test, and measuring the temperature of the batwing pin (T_{BW}) does this. The chip (junction) temperature can now be calculated:

$$T_J = T_{BW} + P_D \times RTh_{J-BW}$$

where Rth_{J-BW} is the thermal resistance from junction to the batwing pin.

Package	RTh_{J-BW}
PLCC	9°C/W
DIP	11°C/W
EMP	13°C/W

Extra heatsink

Using extra heatsink for the DIP packages we recommend heatsinks from Columbia-Staver UK, se figure 5.

For the 16 pin DIP package V7-3S or V8-3S and for the 22 pin DIP package V7-7, V8-7 or V7-7ST, V8-7ST.
For further information please contact:

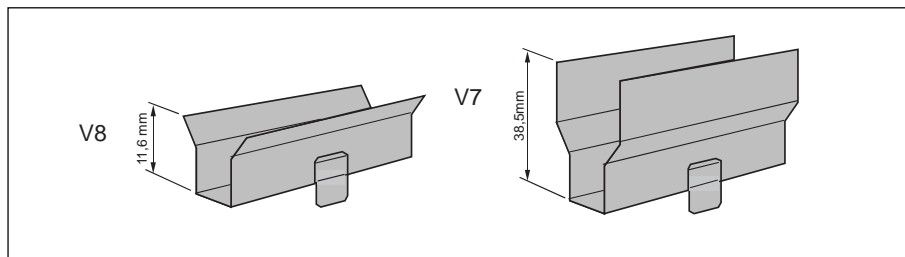


Figure 5. Heatsinks, type V7 and V8 by Columbia-Staver UK.

SUNSTAR 商斯达实业集团是集研发、生产、工程、销售、代理经销、技术咨询、信息服务等为一体的高科技企业，是专业高科技电子产品生产厂家，是具有 10 多年历史的专业电子元器件供应商，是中国最早和最大的仓储式连锁规模经营大型综合电子零部件代理分销商之一，是一家专业代理和分销世界各大品牌 IC 芯片和电子元器件的连锁经营综合性国际公司，专业经营进口、国产名厂名牌电子元件，型号、种类齐全。在香港、北京、深圳、上海、西安、成都等全国主要电子市场设有直属分公司和产品展示展销窗口门市部专卖店及代理分销商，已在全国范围内建成强大统一的供货和代理分销网络。我们专业代理经销、开发生产电子元器件、集成电路、传感器、微波光电元器件、工控机/DOC/DOM 电子盘、专用电路、单片机开发、MCU/DSP/ARM/FPGA 软件硬件、二极管、三极管、模块等，是您可靠的一站式现货配套供应商、方案提供商、部件功能模块开发配套商。商斯达实业公司拥有庞大的资料库，有数位毕业于著名高校——有中国电子工业摇篮之称的西安电子科技大学（西军电）并长期从事国防尖端科技研究的高级工程师为您精挑细选、量身订做各种高科技电子元器件，并解决各种技术问题。

微波光电部专业代理经销高频、微波、光纤、光电元器件、组件、部件、模块、整机；电磁兼容元器件、材料、设备；微波 CAD、EDA 软件、开发测试仿真工具；微波、光纤仪器仪表。欢迎国外高科技微波、光纤厂商将优秀产品介绍到中国、共同开拓市场。长期大量现货专业批发高频、微波、卫星、光纤、电视、CATV 器件：晶振、VCO、连接器、PIN 开关、变容二极管、开关二极管、低噪晶体管、功率电阻及电容、放大器、功率管、MMIC、混频器、耦合器、功分器、振荡器、合成器、衰减器、滤波器、隔离器、环行器、移相器、调制解调器；光电子器件和组件：红外发射管、红外接收管、光电开关、光敏管、发光二极管和发光二极管组件、半导体激光二极管和激光器组件、光电探测器和光接收组件、光发射接收模块、光纤激光器和光放大器、光调制器、光开关、DWDM 用光发射和接收器件、用户接入系统光收发器件与模块、光纤连接器、光纤跳线/尾纤、光衰减器、光纤适配器、光隔离器、光耦合器、光环行器、光复用器/转换器；无线收发芯片和模组、蓝牙芯片和模组。

更多产品请看本公司产品专用销售网站：

商斯达中国传感器科技信息网：<http://www.sensor-ic.com/>

商斯达工控安防网：<http://www.pc-ps.net/>

商斯达电子元器件网：<http://www.sunstare.com/>

商斯达微波光电产品网：[HTTP://www.rfoe.net/](http://www.rfoe.net/)

商斯达消费电子产品网：<http://www.icasic.com/>

商斯达实业科技产品网：<http://www.sunstars.cn/> 微波元器件销售热线：

地址：深圳市福田区福华路福庆街鸿图大厦 1602 室

电话：0755-82884100 83397033 83396822 83398585

传真：0755-83376182 (0) 13823648918 MSN: SUNS8888@hotmail.com

邮编：518033 E-mail:szss20@163.com QQ: 195847376

深圳赛格展销部：深圳华强北路赛格电子市场 2583 号 电话：0755-83665529 25059422

技术支持：0755-83394033 13501568376

欢迎索取免费详细资料、设计指南和光盘；产品凡多，未能尽录，欢迎来电查询。

北京分公司：北京海淀区知春路 132 号中发电子大厦 3097 号

TEL: 010-81159046 82615020 13501189838 FAX: 010-62543996

上海分公司：上海市北京东路 668 号上海赛格电子市场 D125 号

TEL: 021-28311762 56703037 13701955389 FAX: 021-56703037

西安分公司：西安高新开发区 20 所(中国电子科技集团导航技术研究所)

西安劳动南路 88 号电子商城二楼 D23 号

TEL: 029-81022619 13072977981 FAX:029-88789382