

# **Model 2404**

# Hollow Reaction Torque Sensor

#### **DESCRIPTION**

Model 2404 hollow reaction torque sensor is designed for housing reaction force measurement in mixing, hydraulic pump, and motor test applications. These models operate and are calibrated in both directions. Nickel-plated alloy steel construction enhances durability in harsh, industrial environments.

These models have no moving parts and utilize four bonded strain gages on a special machined portion of the transducer to achieve a maximum non-linearity of 0.1% over a wide dynamic range. 50 in-lb to 5000 in-lb capacities.

#### **FEATURES**

- 50 in-lb to 5000 in-lb
- 0.1 % non-linearity and hysteresis
- High torsional stiffness
- Higher resistance to bending moments
- Reduced friction error
- · Low-end sensitivity due to absence of moving parts

Safety considerations: It would be unsafe to operate Honeywell torque sensors and load cells beyond static overload or ultimate extraneous load limits as defined in the glossary of terms or, when applicable, higher than maximum speed. When in doubt, consult factory. Honeywell is not responsible for any property damage or personal injury which may result because of the misapplication of the transducer.

## **Model 2404**

#### PERFORMANCE SPECIFICATIONS

Characteristic	Measure		
Torque range	50, 100, 200, 500, 1K, 2K, 5K lb-in		
Non-linearity	±0.1 % of rated output		
Hysteresis	±0.1 % of rated output		
Repeatability	±0.05 % of rated output		
Output @ rated capacity	1.5 mV/V (nominal)		


#### **ENVIRONMENTAL SPECIFICATIONS**

Characteristic	Measure		
Temperature, operating	-54 °C to 93 °C [-65 °F to 200 °F]		
Temperature, compensated	21 °C to 77 °C [70 °F to 170 °F]		
Temperature effect, zero	±0.002 %/of rated output °F		
Temperature effect, output	±0.002 %/of reading °F		

#### **ELECTRICAL SPECIFICATIONS**


Characteristic	Measure		
Excitation (maximum)	20 Vdc or Vac RMS		
Insulation resistance	> 5000 mOhm @ 50 Vdc		
Bridge resistance	700 ohm (nominal)		
Number of bridges	1		
Zero balance	±1.0 % of rated output		

#### **TYPICAL SYSTEM DIAGRAM**

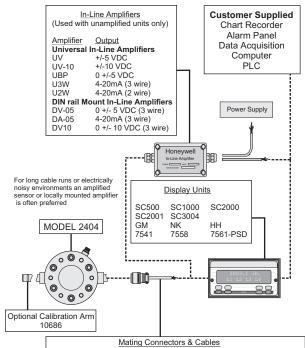

064-LW13621 Mating Connector
7200-76-XX\* Mating connector & 6 conductor cable
(unamplified unit with sense leads but not shunt cal)
7200-75-XX\*\* Mating connector & 4 conductor cable
(unamplified unit without sense leads but not shunt cal)
7200-111-XX\* Mating connector & 6 conductor cable
(for connection to instrument 7541)
7200-110-XX\*\* Mating connector & 4 conductor cable
(for connection to instrument 7541)

#### LOAD CARRYING CAPACITY



W - weight

W x S - overhung moment

S - distance to W


Do not exceed moment (W x S) or shear (W), whichever value is attained first P = thrust

## Hollow Reaction Torque Sensor

#### **MECHANICAL SPECIFICATIONS**

Model	Capacity Nm [lb-in]	Overload Nm [lb-in]	Torsional stiffness Nm/rad [lb-in/rad]	Max. overhung moment WxS Nm [lb-in]	Max. shear W N [lb]	Max. thrust P N [lb]
2404-50	5 [50]	25 [250]	1920 [17000]	22 [200]	222 [50]	889 [200]
2404-100	10 [100]	30 [300]	4519 [40000]	34 [300]	445 [100]	1334 [300]
2404-200	20 [200]	55 [500]	11298 [100000]	44 [400]	667 [150]	1779 [400]
2404-500	55 [500]	85 [750]	28245 [250000]	77 [700]	1334 [300]	2668 [600]
2404-1K	115 [1000]	170 [1500]	56490 [500000]	113 [1000]	1779 [400]	4448 [1000]
2404-2K	225 [2000]	340 [3000]	141224 [1250000]	226 [2000]	2224 [500]	6672 [1500]
2404-5K	565 [5000]	850 [7500]	395427 [3500000]	338 [3000]	2669 [600]	11120 [2500]

#### **MOUNTING DIMENSIONS**

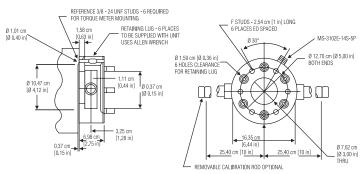

For reference only

## SUNSTAR传感与控制 http://www.sensor-ic.com/ TEL:0755-83376549 FAX:0755-83376182 E-MAIL:szss20@163.com/ Model 2404 Hollow Reaction Torque Sensor

Warranty. Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship. Honeywell's standard product warranty applies unless agreed to otherwise by Honeywell in writing; please refer to your order acknowledgement or consult your local sales office for specific warranty details. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace, at its option, without charge those items it finds defective. The foregoing is buyer's sole remedy and is in lieu of all warranties, expressed or implied, including those of merchantability and fitness for a particular purpose. In no event shall Honeywell be liable for consequential, special, or indirect damages.

While we provide application assistance personally, through our literature and the Honeywell web site, it is up to the customer to determine the suitability of the product in the application.

Specifications may change without notice. The information we supply is believed to be accurate and reliable as of this printing. However, we assume no responsibility for its use.

For more information about Sensing and Control products, visit www.honeywell.com/sensing or call +1-815-235-6847 Email inquiries to info.sc@honeywell.com



• DO NOT USE these products as safety or emergency stop devices or in any other application where failure of the product could result in personal injury.

Failure to comply with these instructions could result in death or serious injury.

### **WARNING** MISUSE OF DOCUMENTATION

- The information presented in this catalogue is for reference only. DO NOT USE this document as product installation information.
- Complete installation, operation and maintenance information is provided in the instructions supplied with each product.

Failure to comply with these instructions could result in death or serious injury.

Sensing and Control Automation and Control Solutions Honeywell 1985 Douglas Drive North Golden Valley, MN 55422 USA +1-815-235-6847

Honeywell

008801-1-EN IL50 GLO June 2008

Copyright © 2008 Honeywell International Inc. All rights reserved.