

NEW PRODUCTS

Philips Semiconductors are working intensively on bringing new Power Diode products to the market. The products listed below appear for the first time in this data handbook.

25 V SCHOTTKY DIODES

A range of low voltage schottky diodes with a reverse voltage rating of 25 V, with extremely low forward voltage and ultra fast switching. These products are intended for use in switched mode power supplies with 3 V and 3.3 V outputs. They are also ideal for use as or-ing diodes in fault tolerant designs or current sharing configurations. Types: BYV116, PBYR225CT, PBYR1025, PBYR1525CT, PBYR2025CT, PBYR2525CT.

DEFLECTION DIODES

Further extensions to our range of high voltage, fast recovery diodes, designed for use in the horizontal deflection stages of multisync computer monitors with scan rates up to 82 kHz. These devices complement our range of high voltage bipolar deflection transistors and have fast forward recovery time, low forward recovery voltage and reverse voltage ratings up to 1700 V. Types: BY479X-1700, BY559-1500.

ISOLATED 45 V SCHOTTKY AND 200 V EPITAXIAL DIODES

A wide range of 45 V schottky diodes and 200 V ultrafast recovery epitaxial diodes in the SOT186A envelope. This package is an isolated version of TO220AB with 2500 Vrms isolation between leads and case. Types: BYV118X, BYV133X, BYV143X, PBYR745X, PBYR1045X, PBYR1545CTX, PBYR1645X, PBYR2045CTX, PBYR2545CTX, BYQ28X, BYQ28EX, BYW29EX, BYV32EX, BYV42EX,

SURFACE MOUNT POWER DIODES IN SOT404

A wide range of schottky and 200 V epitaxial diodes in a SOT404 envelope suitable for surface mounting. This package is a surface mounting version of TO220AB with the same thermal resistance and current rating. Types: BYV118B, BYV143B, PBYR745B, PBYR1045B, PBYR10100B, PBYR1545CTB, PBYR1645B, PBYR2045CTB, PBYR20100CTB, PBYR2545CTB, BYQ28EB, BYW29EB, BYV32EB, BYV42EB, BYV79EB.

SURFACE MOUNT BREAKOVER DIODES IN SOD106

The BR211 range of breakover diodes in a SOD106 surface mounting envelope. Used for transient overvoltage protection in line based telecommunications equipment. BR211SM series.

FORTHCOMING PRODUCTS

The products listed below are planned for release within the next 12 months, before the next edition of this data handbook. Contact your Philips Regional or National Sales office for further details.

SURFACE MOUNT POWER DIODES IN SOT428

Available towards the end of 1996, a range of schottky and 200 V epitaxial diodes in a SOT428 envelope suitable for surface mounting. The SOT428 envelope is slightly larger than our present subminiature surface mounting package, SOT223 and may be mounted on the same printed circuit pad layout. However, it has lower thermal resistance and can accommodate larger crystal sizes, thereby allowing higher current ratings to be achieved in a smaller package.

SCHOTTKY AND 200 V EPITAXIAL DIODES IN TO247

Available during the first quarter of 1997, a range of schottky and 200 V epitaxial diodes in a TO247 envelope suitable for high power applications, featuring low thermal resistance and output current ratings up to 60 Amps.

POWER FACTOR CORRECTION DIODES

Available during the first quarter of 1997, a range of ultrafast, 600 V epitaxial diodes specifically designed for power factor correction and other forced commutation applications. These diodes are designed to minimise switching losses both in the diode and in the switching transistor. Other applications include freewheeling diodes in full and half bridge switched mode power supplies, where they complement our new range of 400 V, 500 V and 600 V power mosfets.

APPLICATIONS

Application information for Power Diodes and other Philips power products is published in Philips Power Semiconductor Applications Handbook. (Order code: 9398-652-85011)

POWER DIODE CHARACTERISTICS

Back diffused rectifier diodes

A single-diffused P-N diode with a two layer structure cannot combine a high forward current density with a high reverse blocking voltage.

A way out of this dilemma is provided by the three layer structure, the so-called P-I-N diode, where 'I' is a lightly doped (nearly intrinsic) layer. This layer, called the base, is sandwiched between the highly doped diffused P⁺ and N⁺ outer layers giving a P⁺-P-N⁺ or P⁺-N-N⁺ structure. Generally, the base gives the diode its high reverse voltage, and the two diffused regions give the high forward current rating.

Such a three layer diode can be realised using a 'back-diffused' structure. A lightly doped silicon wafer is given a very long N⁺ diffusion on one side, followed by a relatively shallow P⁺ diffusion on the opposite side. This asymmetric diffusion allows better control of the thickness of the base layer than the conventional double diffusion method, resulting in a better trade-off between low forward voltage and high reverse blocking voltage. Generally, for a given silicon area, the thicker the base layer the higher the V_R and the lower the I_F. Reverse switching characteristics also determine the base design. Fast recovery diodes usually have N-type base regions to give 'soft' recovery with a narrow base layer to give fast switching.

Ultra fast rectifier diodes

Ultra fast rectifier diodes, made by epitaxial technology, are intended for use in applications where low conduction and switching losses are of paramount importance and relatively low reverse blocking voltage (V_{RWM} = 150V) is required: e.g. Switched mode power supplies operating at frequencies of about 50 kHz.

The use of epitaxial technology means that there is very close control over the almost ideal diffusion profile and base width giving very high carrier injection efficiencies leading to lower conduction losses than conventional technology permits. The well defined diffusion profile also allows a tight control of stored minority carriers in the base region, so that very fast turn-off times (35 ns) can be achieved. The range of devices also has a soft reverse recovery and a low forward recovery voltage.

Schottky-barrier rectifier diodes

Schottky-barrier rectifiers find application in low-voltage switched-mode power supplies (e.g. a 5 V output) where they give an increase in efficiency due to the very low forward drop, and low switching losses. Power Schottky diodes are made by a metal-semiconductor barrier process to minimise forward voltage losses, and being majority carrier devices have no stored charge. They are therefore capable of operating at extremely high speeds. Electrical performance in forward and reverse conduction is uniquely defined by the device's metal-semiconductor

'barrier height'. Philips process minimises forward voltage drop, whilst maintaining reverse leakage current at full rated working voltage and T_{jmax} at an acceptable level.

Philips range of power schottky-barrier diodes can withstand reverse voltage transients and have guaranteed reverse surge capability.

Power diode ratings

A rating is a value that establishes either a limiting capability or a limiting condition for an electronic device. It is determined for specified values of environment and operation, and may be stated in any suitable terms. Limiting conditions may be either maxima or minima.

All limiting values quoted in this data handbook are Absolute Maximum Ratings - limiting values of operating and environmental conditions applicable to any device of a specified type, as defined by its published data, which should not be exceeded under the worst probable conditions.

VOLTAGE RATINGS

- V_{RSM} Non-repetitive peak reverse voltage. The maximum allowable instantaneous reverse voltage including all non-repetitive transients. duration ≤ 10 ms.
- V_{RRM} Repetitive peak reverse voltage. The maximum allowable instantaneous reverse voltage including transients which occur every cycle, duration ≤ 10 ms, duty cycle ≤ 0.01.
- V_{RWM} Crest working reverse voltage. The maximum allowable instantaneous reverse voltage including transients which may be applied every cycle excluding all repetitive and non-repetitive transients.
- V_R Continuous reverse voltage. The maximum allowable constant reverse voltage. Operation at rated V_R may be limited to junction temperatures below T_{jmax} in order to prevent thermal runaway.

CURRENT RATINGS

- I_{F(AV)} Average forward current. Specified for either square or sinusoidal current waveforms at a maximum mounting base or heatsink temperature. The maximum average current which may be passed through the device without exceeding T_{jmax}.
- I_{F(RMS)} Root mean square current. The rms value of a current waveform is the value which causes the same dissipation as the equivalent d.c. value.
- I_{FRM} Repetitive peak forward current. The maximum allowable peak forward current including transients which occur every cycle. The junction temperature should not exceed T_{jmax} during repetitive current transients.
- I_{FSM} Non-repetitive forward current. The maximum allowable peak forward current which may be applied no more than 100 times in the life of the device. Usually specified with reapplied V_{RWM} following the surge.

I_{RRM} Repetitive peak reverse current. The maximum allowable peak reverse current including transients which occur every cycle.

I_{RSM} Non-repetitive reverse current. The maximum allowable peak reverse current which may be applied no more than 100 times in the life of the device.

Forward current ratings

The forward voltage/ current characteristic of a diode may be approximated by a piecewise linear model as shown in fig:1. where R_S is the slope of the line which passes through the rated current and V_O is the voltage axis intercept. The forward voltage is then $V_F = V_O + I_F \cdot R_S$, and the instantaneous dissipation is $P_F = V_O \cdot I_F + I_F^2 \cdot R_S$, where I_F is the instantaneous forward current.

It can be shown that the average forward dissipation for any current waveform is: $P_{F(AV)} = V_O \cdot I_{F(AV)} + I_{F(RMS)}^2 \cdot R_S$, where $I_{F(AV)}$ is the average forward current and $I_{F(RMS)}$ is the rms value of the forward current. Graphs in the published data show forward dissipation as a function of average current for square or sinusoidal waveforms over a range of duty cycles and form factors.

To ensure reliable operation, the maximum allowable junction temperature $T_{j,max}$ should not be exceeded repetitively, either as a result of the average dissipation in the device or as a result of high peak currents

The average junction temperature rise is the average dissipation multiplied by the thermal resistance; $R_{th j-mb}$ or $R_{th j-hs}$. Subtracting the junction temperature rise from the maximum allowable junction temperature $T_{j,max}$, gives the maximum allowable mounting base or heatsink temperature.

The peak junction temperature rise for a rectangular current pulse may be found by multiplying the instantaneous power by the thermal impedance. Analysis methods for non-rectangular pulses are covered in the Power Semiconductor Applications handbook.

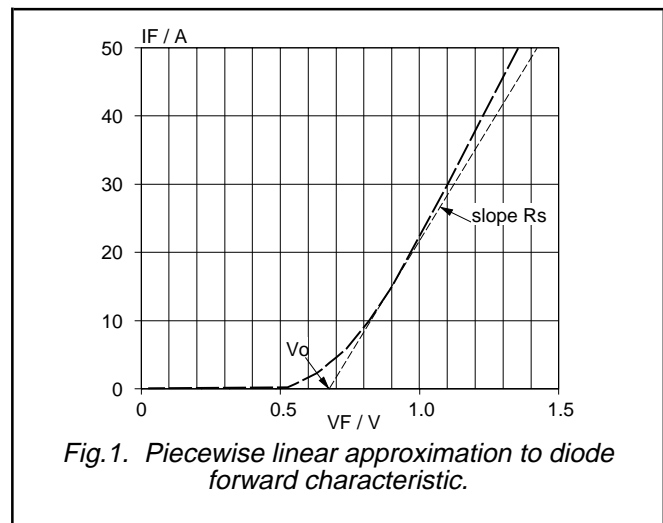


Fig.1. Piecewise linear approximation to diode forward characteristic.

Power diode characteristics

A characteristic is an inherent and measurable property of a device. Such a property may be expressed as a value for stated or recognized conditions. A characteristic may also be a set of related values, usually shown in graphical form.

REVERSE RECOVERY

When a semiconductor rectifier diode has been conducting in the forward direction sufficiently long to establish the steady state, there will be a charge due to minority carriers present. Before the device can block in the reverse direction this charge must be extracted. This extraction takes the form of a transient reverse current and this, together with the reverse bias voltage results in additional power dissipation which reduces the rectification efficiency. At sine-wave frequencies up to about 400Hz these effects can often be ignored, but at higher frequencies and for square waves the switching losses must be considered. The parameters of reverse recovery are defined in fig:2.

Stored charge

The area under the I_R versus time curve is known as the stored charge (Q_s) and is normally quoted in microcoulombs or nanocoulombs. Low stored charge devices are preferred for fast switching applications.

Reverse recovery time

Another parameter which can be used to determine the speed of the rectifier is the reverse recovery time (t_r). This is measured from the instant the current passes through zero (from forward to reverse) to the instant the current recovers to either 10% or 25% of its peak reverse value. Low reverse recovery times are associated with low stored charge devices.

The conditions which need to be specified are:

- Steady-state forward current (I_F); high currents increase recovery time.

- b. Reverse bias voltage (V_R); low reverse voltage increases recovery time.
- c. Rate of fall of anode current (di_F/dt); high rates of fall reduce recovery time, but increase stored charge.
- d. Junction temperature (T_j); high temperatures increase both recovery time and stored charge.

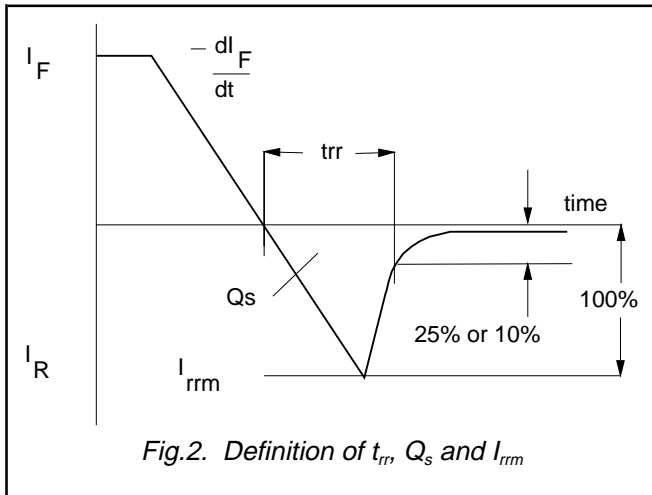


Fig.2. Definition of t_{rr} , Q_s and I_{rrm}

Softness of recovery

In many switching circuits it is not just the magnitude but the shape of the reverse recovery characteristic that is important. If the positive-going edge of the characteristic has a fast rise time (as in a so-called 'snap-off' device) this edge may cause conducted or radiated radio frequency interference (rfi), or it may generate high voltages across inductors which may be in series with the rectifier. The maximum slope of the reverse recovery current (di_R/dt) is quoted as a measure of the 'softness' of the characteristic. Low values are less liable to give rfi problems. The measurement conditions which need to be specified are as above.

Reverse recovery current

The peak value of the reverse recovery current (I_{rrm}) is an important parameter in many switched mode power supply circuits. This is because the high transient current produced by a diode with a high I_{rrm} can be interpreted by the circuit as a short circuit fault, which may cause the power supply to shut down or have apparently poor load regulation. Like the stored charge and reverse recovery time, I_{rrm} increases with increasing temperature, so the effects sometimes only become apparent when the equipment gets hot. I_{rrm} correlates with stored charge Q_s . Thus choosing an Ultrafast diode with low Q_s usually avoids this problem.

SWITCHING LOSSES

The product of the transient reverse current and the reverse voltage is power dissipation, most of which occurs whilst the reverse recovery current is decreasing from the peak value (I_{rrm}) to zero. In repetitive operation an average power can be calculated and added to the forward

dissipation to give the total power. The peak value of transient reverse current is known as I_{rrm} . The origin of reverse recovery losses is illustrated in fig:3.

The conditions which need to be specified are:

- a. Forward current (I_F); high currents increase switching losses.
- b. Rate of fall of anode current (di_F/dt); high rates of fall increase switching losses. This is particularly important in square-wave operation. Power losses in sine-wave operation for a given frequency are considerably less due to the much lower di_F/dt .
- c. Frequency (f); high frequency means high losses.
- d. Reverse bias voltage (V_R); high reverse bias means high losses.
- e. Junction temperature (T_j); high temperature means high losses.

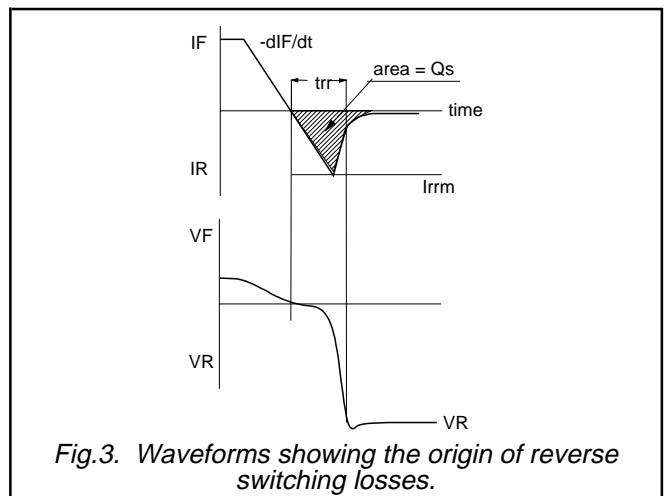


Fig.3. Waveforms showing the origin of reverse switching losses.


FORWARD RECOVERY

At the instant a semiconductor rectifier diode is switched into forward conduction there are no carriers present at the junction, hence the forward voltage drop may be instantaneously of a high value. As the stored charge builds up, conductivity modulation takes place and the forward voltage rapidly falls to the steady state value. The peak value of forward voltage drop is known as the forward recovery voltage (V_{fr}). The time from the instant the current reaches 10% of its steady-state value to the time the forward voltage drops below a given value (usually 5V or 2V) is known as the forward recovery time (t_{fr}). The forward recovery parameters are defined in fig:4.

The conditions which need to be specified are:

- a. Forward current (I_F); high currents give high recovery voltages.
- b. Current pulse rise time (t_r); short rise times give high recovery voltages.

c. Junction temperature (T_j); The influence of temperature is slight.

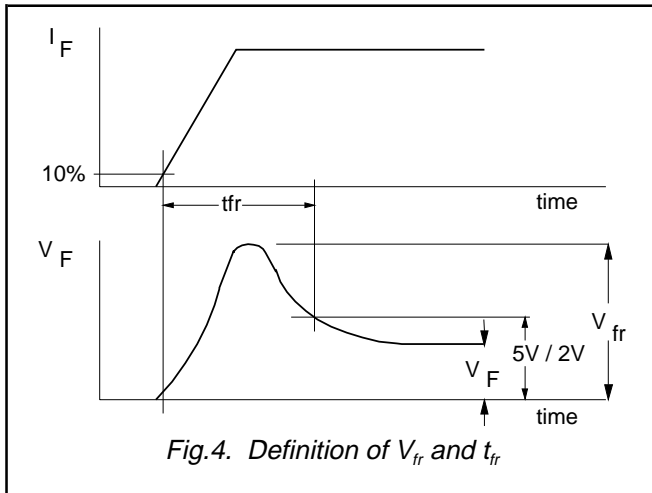


Breakover diodes

Breakover diodes (BOD's) are two terminal devices that operate in either an off (non-conducting) or an on (conducting) state. A BOD will remain in the off state until the maximum breakover voltage is applied across its terminals. A BOD will then conduct with a low on-state voltage until the current is reduced below the minimum holding current.

BOD's are available as Single Symmetric (operation in 1st and 3rd quadrants) in a hermetically sealed axial leaded SOD84 envelope, and also in a surface mount SOD106 package. BOD's are graded according to breakover voltage.

BREAKOVER DIODE CHARACTERISTICS

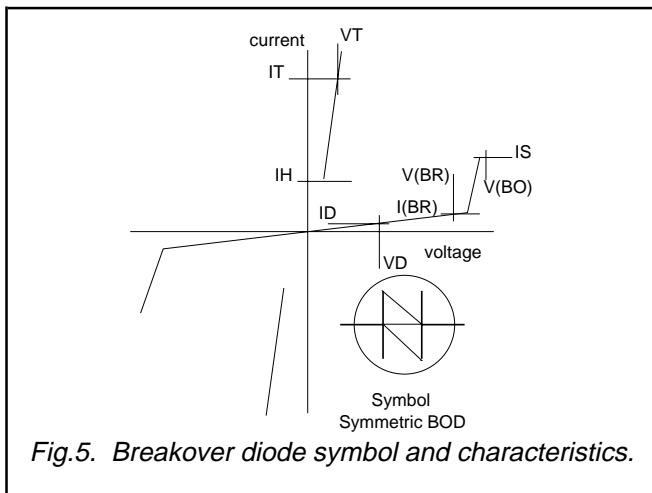

The main characteristics are illustrated in fig:5. These characteristics are:-

- $V_{(BO)}$ Breakover voltage, the maximum voltage appearing across the BOD before switching to the on-state.
- V_D Stand-off voltage, maximum normal operating voltage.
- I_D Off-state current, normally quoted at V_D .
- $V_{(BR)}$ Breakdown voltage, below which the BOD will not go into avalanche breakdown.
- $I_{(BR)}$ Breakdown current, with $V_{(BR)}$ applied.
- I_S Switching current, the avalanche current required to switch the BOD to the on-state.
- I_T On-state current.
- V_T On-state voltage, specified at a given I_T .
- I_H Holding current, the minimum current at which the BOD will remain in the on-state.

USE OF BREAKOVER DIODES

BOD's are primarily designed to protect electronic equipment connected to transmission lines against transient overvoltages. However, there are many uses for BOD's as breakover switches.

In designing BOD circuits the following must be considered:-

Off-state conditions


- V_D Must not be exceeded in normal off-state operation. In the off-state the BOD will not pass more current than I_D .
- dV_D/dt The rate of rise of voltage must not exceed that quoted for the device. If this is exceeded the BOD may switch to the on-state.
- $V_{(BR)}$ To ensure the BOD remains in the off-state, the voltage must remain below $V_{(BR)min}$. If this is exceeded, the BOD will either clip the voltage or switch to the on-state.
- I_S If $V_{(BR)}$ is exceeded but the current limited to below I_S minimum, the BOD is prevented from switching to the on-state.
- C_j The off-state capacitance across the BOD. In transmission line protection applications this will be across the termination of the line.

Switching conditions

- $V_{(BO)}$ A transient voltage greater than $V_{(BO)max}$ is required to switch the BOD. $V_{(BO)}$ may be greater than the voltage across the BOD when it is passing a current of I_{Smax} .
- I_S To enable the BOD to switch to the on-state a current greater than I_S maximum is required.

On-state conditions

- V_T The on-state voltage is quoted for a given I_T
- I_H To enable the BOD to switch to the off-state the current must fall below I_H minimum.
- I_{TSM} I_{TSM} specifies the rate of rise and duration of a transient peak on-state current. The waveshape is defined according to CCITT Rec. K17, illustrated in Fig.6. The waveform is referred to as 10/700 μ s waveform.

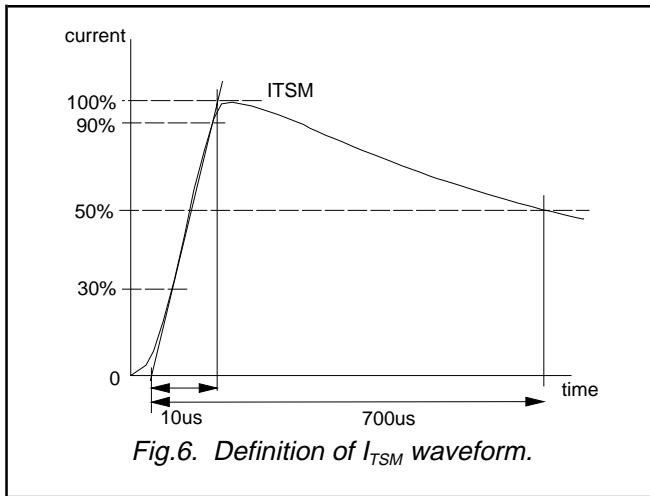*Thermal conditions*

- R_{th} For extended on-state operation (> 0.1 ms) the steady-state thermal resistance should be considered. Total thermal resistance to ambient should be sufficiently low to dissipate the heat generated by the device.
- Z_{th} If the BOD is used only during transient overvoltages then the transient thermal impedance to ambient should be considered.

QUALITY

Total Quality Management



Philips Semiconductors is committed to be a world class, customer driven, volume supplier of semiconductors.

To achieve this, we operate a Total Quality Management (TQM) system, based on Continuous Improvement and Quality Assurance in all our business activities, and Partnerships with our customers and suppliers.

The top priority throughout the company is Continuous Improvement.

To focus on this we will:

- Work closely with key customers, as our partners.
- Monitor progress, using customer-driven data, of our product and services.
- Benchmark against the best.

Furthermore, all parts of the organisation must always demonstrate:

- The presence of a strong, management-led improvement structure.
- Commitment and participation in all areas.
- Measurable progress towards our Quality Improvement goals.

Organisation

An organisation is in place which ensures that personnel with the necessary organisational freedom and authority can identify and solve quality problems, prevent occurrence of product non-conformity and protect the customer from non-conforming product.

Design control

A comprehensive design and development procedure is in place which ensures that the requirements of good design practice are met.

Particular emphasis is placed on ensuring that the initial specification is agreed by the Customer and the Marketing and Development functions.

There are regular formal reviews of design progress to ensure that the initial specification will be met by the design.

Detailed measurements are made on initial samples to ensure that the initial specification has been met.

Process control

All processes which directly affect quality are carried out under controlled conditions. Documented work instructions are available for all production processes and the appropriate environmental controls are in place to

ensure consistent processing. Monitoring of the product, processes and the environment takes place during production.

Approval exercises are run to ensure that new processes and new equipment perform at an acceptable level.

Written, photographic or visual standards are available at the appropriate points in the production processes.

Corrective action

Non-conforming product found in process is investigated and the root causes identified. Changes to product or process are then introduced to prevent recurrence of the problem.

Quality assurance

Based on ISO 9000 standards, customer standards such as Ford TQE. Our factories are certified to ISO 9000.

Partnerships with customers

These include: PPM co-operations, design-in agreements, ship-to-stock, just-in-time, self-qualification programmes and application support.

Partnerships with suppliers

In addition to ISO9000 audits and close monitoring of supplier delivery performance, we operate a Supplier Excellence Award scheme which requires suppliers and their sub-suppliers to use statistical process control, perform gauge studies and use failure mode and effect analysis (FMEA) techniques to identify and correct the root causes of quality and delivery problems.

Product reliability

With the increasing complexity of Original Equipment Manufacturer (OEM) equipment, component reliability must be extremely high. Our research laboratories and development departments study the failure mechanisms of semiconductors. Their studies result in design rules and process optimizations for the highest built-in product reliability. Highly accelerated tests are applied in order to evaluate the product reliability. Rejects from reliability tests and from customer complaints are submitted to failure analysis and the results applied to improve the product or process.

Customer responses

Our quality improvement depends on joint action with our customer. We need our customers inputs and we invite constructive comment on all aspects of our performance. Please contact your local sales representative.

Recognition

The high quality of our products and services is demonstrated by many Quality Awards granted by major customers and international organisations.

SUNSTAR 商斯达实业集团是集研发、生产、工程、销售、代理经销、技术咨询、信息服务等为一体的高科技企业，是专业高科技电子产品生产厂家，是具有 10 多年历史的专业电子元器件供应商，是中国最早和最大的仓储式连锁规模经营大型综合电子零部件代理分销商之一，是一家专业代理和分销世界各大品牌 IC 芯片和电子元器件的连锁经营综合性国际公司，专业经营进口、国产名厂名牌电子元件，型号、种类齐全。在香港、北京、深圳、上海、西安、成都等全国主要电子市场设有直属分公司和产品展示展销窗口门市部专卖店及代理分销商，已在全国范围内建成强大统一的供货和代理分销网络。我们专业代理经销、开发生产电子元器件、集成电路、传感器、微波光电元器件、工控机/DOC/DOM 电子盘、专用电路、单片机开发、MCU/DSP/ARM/FPGA 软件硬件、二极管、三极管、模块等，是您可靠的一站式现货配套供应商、方案提供商、部件功能模块开发配套商。商斯达实业公司拥有庞大的资料库，有数位毕业于著名高校——有中国电子工业摇篮之称的西安电子科技大学（西军电）并长期从事国防尖端科技研究的高级工程师为您精挑细选、量身订做各种高科技电子元器件，并解决各种技术问题。

微波光电部专业代理经销高频、微波、光纤、光电元器件、组件、部件、模块、整机；电磁兼容元器件、材料、设备；微波 CAD、EDA 软件、开发测试仿真工具；微波、光纤仪器仪表。欢迎国外高科技微波、光纤厂商将优秀产品介绍到中国、共同开拓市场。长期大量现货专业批发高频、微波、卫星、光纤、电视、CATV 器件：晶振、VCO、连接器、PIN 开关、变容二极管、开关二极管、低噪晶体管、功率电阻及电容、放大器、功率管、MMIC、混频器、耦合器、功分器、振荡器、合成器、衰减器、滤波器、隔离器、环行器、移相器、调制解调器；光电子元件和组件：红外发射管、红外接收管、光电开关、光敏管、发光二极管和发光二极管组件、半导体激光二极管和激光器组件、光电探测器和光接收组件、光发射接收模块、光纤激光器和光放大器、光调制器、光开关、DWDM 用光发射和接收器件、用户接入系统光收发器件与模块、光纤连接器、光纤跳线/尾纤、光衰减器、光纤适配器、光隔离器、光耦合器、光环行器、光复用器/转换器；无线收发芯片和模组、蓝牙芯片和模组。

更多产品请看本公司产品专用销售网站：

商斯达中国传感器科技信息网：<http://www.sensor-ic.com/>

商斯达工控安防网：<http://www.pc-ps.net/>

商斯达电子元器件网：<http://www.sunstare.com/>

商斯达微波光电产品网：[HTTP://www.rfoe.net/](http://www.rfoe.net/)

商斯达消费电子产品网：<http://www.icasic.com/>

商斯达实业科技产品网：<http://www.sunstars.cn/> 微波元器件销售热线：

地址：深圳市福田区福华路福庆街鸿图大厦 1602 室

电话：0755-82884100 83397033 83396822 83398585

传真：0755-83376182 (0) 13823648918 MSN: SUNS8888@hotmail.com

邮编：518033 E-mail:szss20@163.com QQ: 195847376

深圳赛格展销部：深圳华强北路赛格电子市场 2583 号 电话：0755-83665529 25059422

技术支持：0755-83394033 13501568376

欢迎索取免费详细资料、设计指南和光盘；产品凡多，未能尽录，欢迎来电查询。

北京分公司：北京海淀区知春路 132 号中发电子大厦 3097 号

TEL: 010-81159046 82615020 13501189838 FAX: 010-62543996

上海分公司：上海市北京东路 668 号上海赛格电子市场 D125 号

TEL: 021-28311762 56703037 13701955389 FAX: 021-56703037

西安分公司：西安高新开发区 20 所(中国电子科技集团导航技术研究所)

西安劳动南路 88 号电子商城二楼 D23 号

TEL: 029-81022619 13072977981 FAX:029-88789382